

March 2007

Switching to a New Satellite Frequency – OmniSTAR 3000LR, 3000LR8, 3000LR12

1. From the Start Screen, use the 5 buttons and display on the front panel.
2. Press the UP button repeatedly, until the "CHANNEL SELECTION" screen appears.
3. Press the RIGHT button and observe the display shows Satellite Name or "FREQUENCY".
4. Press UP button repeatedly till the display shows "CUSTOM SEE FR / SR".
5. Press the RIGHT button and observe the present frequency on the display.
6. Press DOWN once to select the cursor. Use the UP and DOWN to set the digits and LEFT and RIGHT to move the cursor.
7. Set the chosen frequency (e.g. 1535185000) and enter it with the ENTER button.
8. Set the Symbol rate to the chosen symbol rate (e.g. 2438) and enter it with the ENTER button.
9. Your Receiver is now tuned to the new satellite. Allow 45 minutes to get the system to work

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.