

March 2007

Switching to a New Satellite Frequency – OmniSTAR 3100LR8 and OmniSTAR 3100LR12

Procedure to switch satellite frequency using the User Toolkit Program:

1. Use a RS232 inline cable and connect the RS232 connector labeled 'Command' to the computer
2. Start 3lusertk.exe.
3. Select Operation, Channel Selection, satellite of your choice (e.g. OCSAT)
4. If the chosen satellite is not available in the list, type the chosen frequency in Hz (e.g. 1535 185 000) and select OK.

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.