

March 2007

Switching to a New Satellite Frequency – OmniSTAR 7000LR8 and OmniSTAR 7000LR12

Procedure to switch satellite frequency using the User Toolkit Program:

1. Use the 7000 Command cable with the RS-232 label Command.
2. Connect this cable to a computer.
3. Start 3lusertk.exe.
4. Select Operation, Channel Selection, Channel Selection by Name, name of satellite of your choice
5. If the chosen satellite is not available in the list, type the chosen frequency in Hz (e.g. 1535 185 000) and select OK.

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.