


March 2007

## Switching to a New Satellite Frequency – OmniSTAR 8305HP

To switch the satellite frequency of the 8305HP via a Command-line interface:

1. Close all programs on the computer.
2. Connect the data cable from the AUX Port of the Novatel to the computer.
3. Run the Command-line software (eg. Hyperterminal or Novatel CDU software).
4. In the Command line window type: *assignlband omnistar <satellite frequency> <baud\_rate>*
5. Press <ENTER> key
6. To save configuration, type: *saveconfig <ENTER>*
7. When this has completed successfully, call OmniSTAR for a re-subscription

To switch the satellite frequency of the 8305HP using the View8305 program:

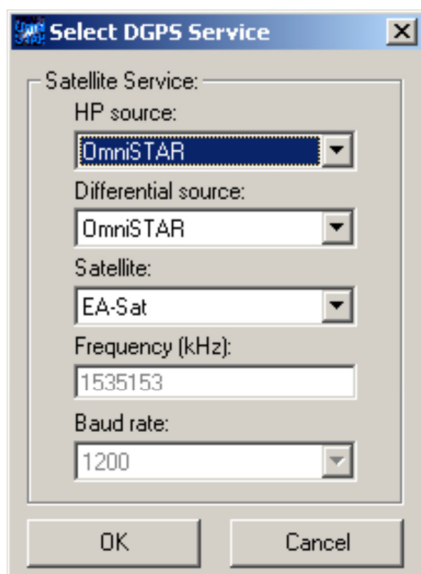

**This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.**

1. From the main screen menu click Configuration -> DGPS service.
2. The Select DGPS service window (see figure) will pop-up.
3. Select OmniSTAR as the HP and differential source and choose the right satellite for your region or **fill in a frequency and baud rate manually**.
4. Clicking OK will send the changes to the receiver.
5. Clicking Cancel will discard them.