


22 November 2011


Switching to a New Satellite Frequency – AgLeader 3100

Procedure to switch satellite frequency using the Menu:

1. Press Menu key on PF3000 until SETUP is displayed.
2. Press SETUP key
3. Press bottom left or right arrow key until GPS is displayed and press GPS key.

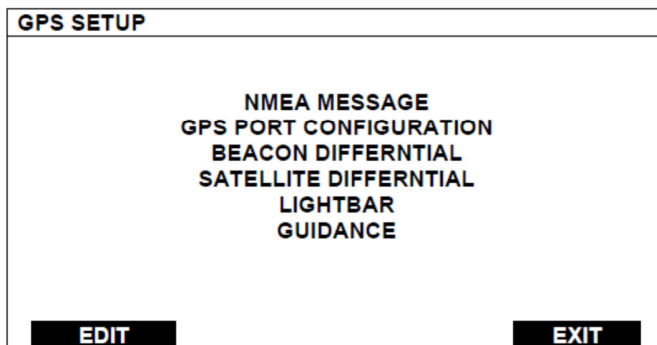

4. At the GPS SETUP screen (above), scroll down to Satellite Differential Mode with down arrow key and press EDIT.

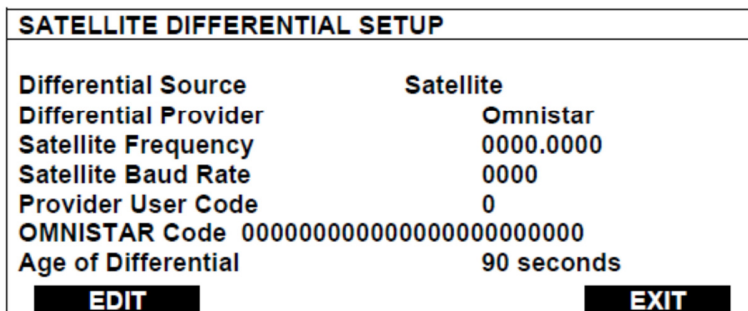

5. At SATELLITE DIFFERENTIAL SETUP screen (above) Differential Source will be highlighted.

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.

6. Press EDIT key and use up or down arrow key until Satellite is displayed and press ACCEPT key.
7. Scroll down to Differential Provider and press EDIT key.
8. Use the up or down arrow key until Omnistar is displayed and press ACCEPT key.
9. Scroll down to Satellite Frequency and press EDIT key.

SATELLITE DIFFERENTIAL SETUP	
Omnistar Satellite Beacon Frequencies:	
Eastern USA	1556.825
Central USA	1554.497
Western USA (1)	1551.429
Western USA (2)	1551.489
Australia	1558.510
Europe	1531.230
South America (1)	1541.705
South America (2)	1541.715
Custom (1)	0000.0
Custom (2)	0000.0
EDIT	EXIT

10. Use the up or down arrow key to select your region (above) and press ACCEPT key.
11. Use the up or down arrow key to select your region and press ACCEPT key.

SATELLITE DIFFERENTIAL SETUP	
Omnistar Satellite Beacon Frequencies:	
Eastern USA	1556.825
Central USA	1554.497
Western USA (1)	1551.429
Western USA (2)	1551.489
Australia	1558.510
Europe	1531.230
South America (1)	1541.705
South America (2)	1541.715
Custom (1)	0000.0
Custom (2)	0000.0
EDIT	EDIT NAME
EDIT VALUE	EXIT

12. If you will be using a custom frequency (above) with this provider, scroll down to Custom (1) and push EDIT NAME key.
13. Use the up/down and left/right arrow keys to name this frequency.
14. Push EDIT VALUE key and use the up/down and left/right arrow keys to enter the frequency and push ACCEPT key.
15. Your customized frequency should appear as the Satellite Frequency.